

Only one sensor can be connected to an IF-NMEAFI at a time. The IF-NMEAFI outputs one specific PGN (for wind, tank gauge, or smart sensor), which is defined by the FI-70 ([Menu] – [System] – [IF-NMEAFI] – [Select IF-NMEAFI]). The IF-NMEAFI comes defaulted to work with the FI-5001 wind Sensor.

